


- 1 Follow the Quick Start Guide instructions included with your Kaptivo Enterprise to set it up on your network.

If your Kaptivo has already been set up, skip this step.



- 2 Select one of two methods to connect KaptivoCast to a Kaptivo.

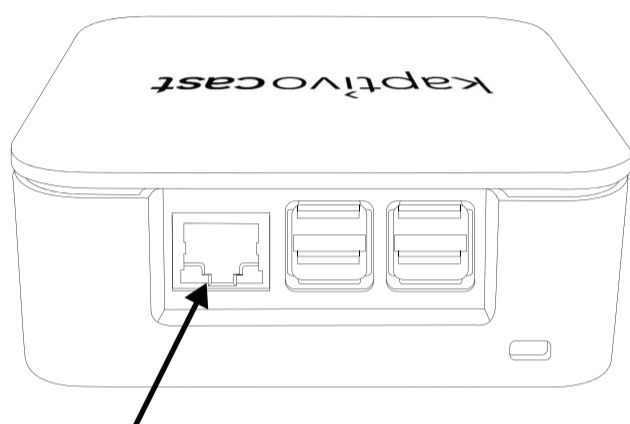


CONNECTION METHOD 01

Point-to-Point: Connect an Ethernet cable between the KaptivoCast and the back of the Kaptivo control pad. You are required to use the provided power supply in this setup.




CONNECTION METHOD 02

Network Connect: Connect an Ethernet cable from the KaptivoCast to your network. If the network connection includes power (PoE), the power supply is not required.

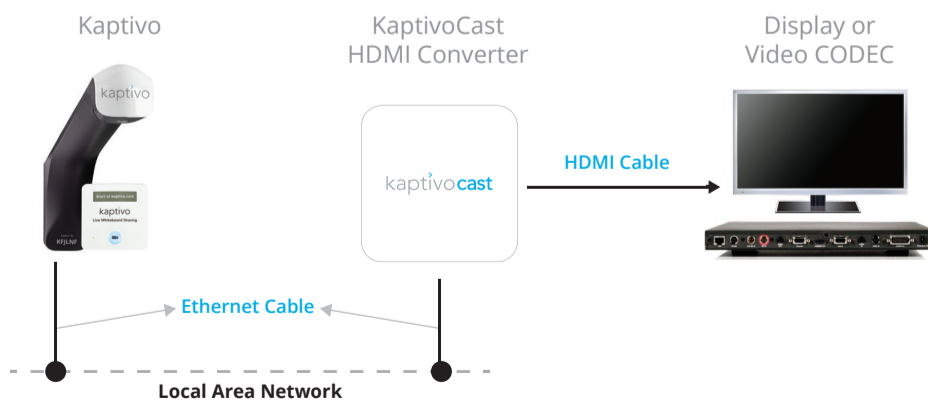

- 3 Add power (if needed) and connect KaptivoCast to an HDMI device. Then follow the on-screen instructions.

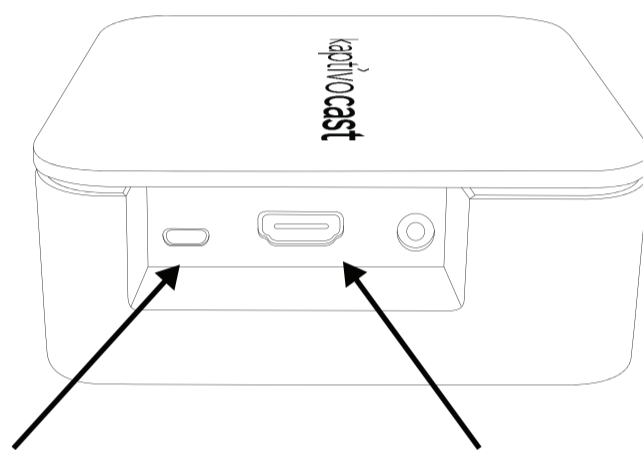

USB Power:

For non-PoE setups, connect the power supply to the USB socket. Use only the provided power supply.

HDMI Out:

Connect an HDMI cable from the KaptivoCast to your HDMI display device.

